

We Are Here To Help!



Before Returning the Product
Call Our Customer Service at

1-855-8681928

We can help you with


- Damaged Package
- Missing Parts
- Technical Support

Front and Rear View




1	Power Indicator & Remote Sensor
2	AC Power In
3	Power / Input Select Button *
4	USB Port
5	HDMI Side
6	Audio Out (Headphone)
7	Optical Audio Out
8	HDMI-1
9	Component/Composite Video
10	Component/Composite Audio In, Music Port
11	DTV / Cable Antenna Input

* Click to select TV input source, press and hold to power off TV

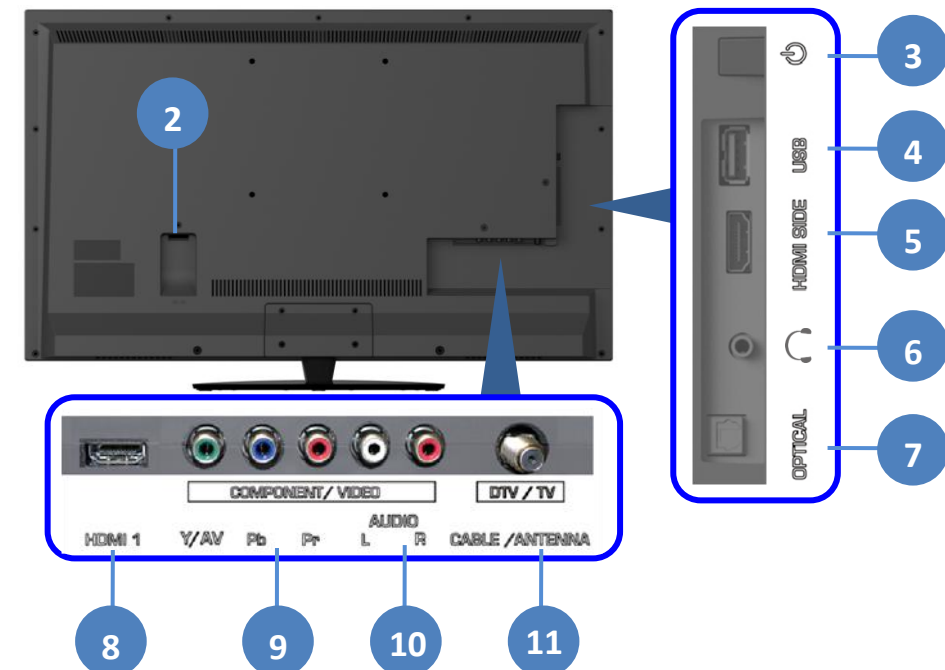

Step 1: Check materials inside the package

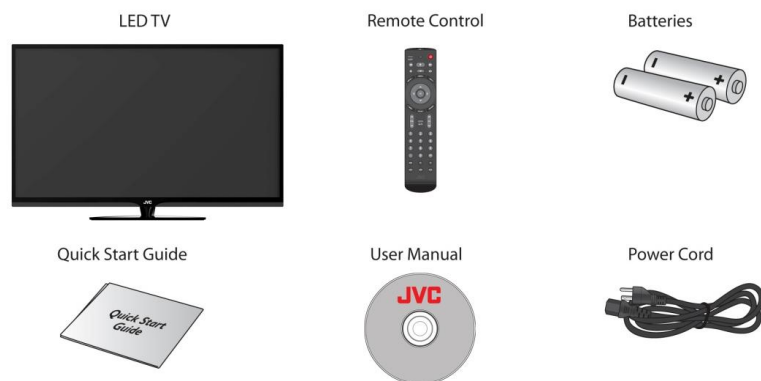


Step 2: Assemble the TV base



Carefully place TV face down on a flat and clean surface. It is recommended to place the TV cover or protection sheet between the TV and the flat surface

1. Attach stand to TV and Fasten four (4) screws provided
2. Attach base to stand and Fasten three (3) screws provided

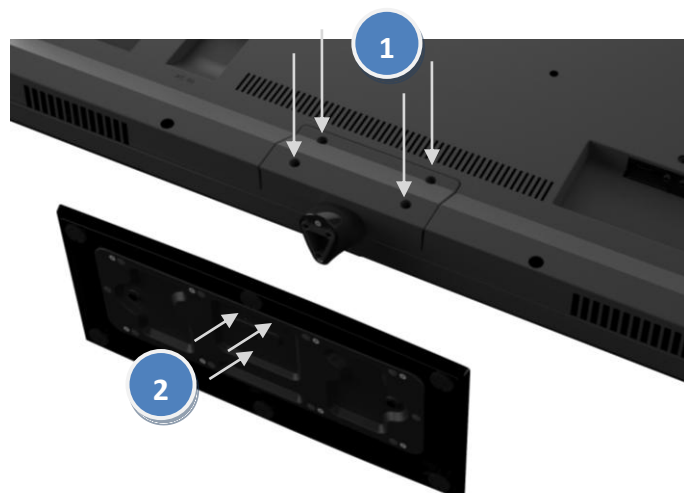


Step 3: Make connections to TV


Connect to Power



Connect to DTV / Cable / Antenna

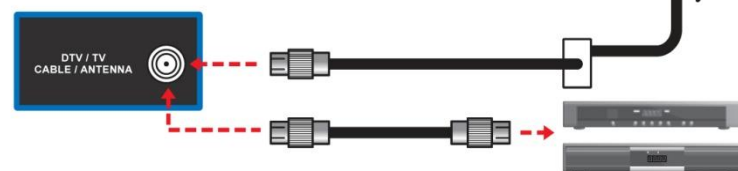


Connect to External Speakers/Amplifiers

 


Digital connection



 
Connect to HD Devices (Bluray Player, Cable or Satellite, Game Console)




Component

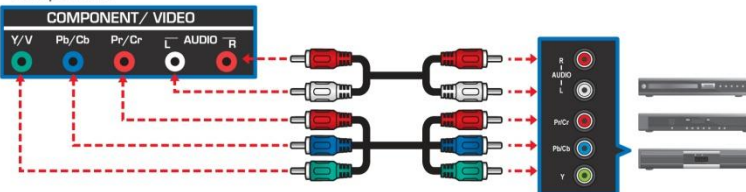


Composite

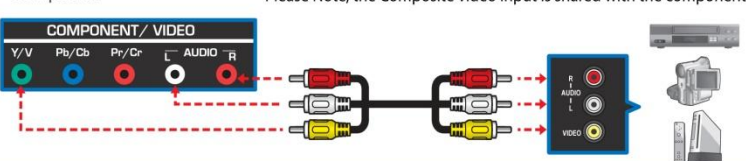

Connect to USB

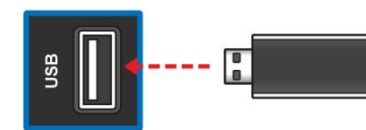

Connect to External Music Players

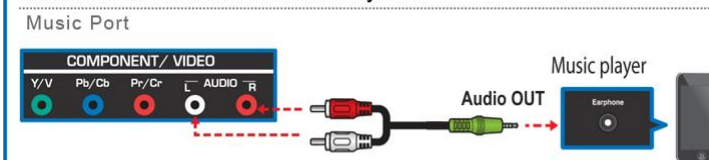

Step 4: TV setup

The **Setup Wizard** appears when you turn on the TV for the first time. You can also run the **Setup Wizard** any time. Refer to user manual for detailed operation



Make sure batteries are inserted to the TV remote control

Follow the TV on-screen instruction and use the remote to choose

- Menu language
- TV mode
- Time Zone
- Channel Scan

